



User manual / Assembly instructions Deponti Louvered Pergola Type Manual Pinela 3x4

Version: EN – November 2022



www.glassgardenroom.co.uk



Contents

9. Warranty conditions

10. Contact

1. Introduction	
2. Safety precautions and warnings	3 3
3. Product description	5 6
4. Parts overview	69
	10
4.1 Part list	10
4.2 Delivery Inspection	11
5. Preparation for assembly	12
5.1 Conditions for assembly	27
5.2 Inspection of tools and accessories	27
6. Assembly	27
7. Maintenance	27
8. Disposal of waste	

KEEP THIS MANUAL IN A SAFE PLACE FOR FUTURE USE!

For the duration and the terms and conditions of the warranty we recommend that you contact your supplier. We also refer you to our General Terms and Conditions of Sale and Delivery which are available on request. Deponti B.V. accepts no liability for any damage or injury resulting from a failure to carefully follow the instructions in this manual or exercise due caution during transport, assembly, use and maintenance of the pergola. As a result of our policy of continuous product improvement, certain product details may differ from what is described in this manual. For this reason the instructions provided only serve as a guideline for installation of the product this manual describes. This manual has been compiled with the utmost care, but Deponti B.V. cannot be held responsible for any errors in this manual or the consequences thereof. Furthermore, all rights are reserved and no part of this manual may be reproduced in any way whatsoever.



1. Introduction



Congratulations on the purchase of your Deponti pergola!

Before you can start enjoying your pergola it must be assembled properly. This manual provides clear instructions for all the steps you must complete for correct assembly of your Deponti pergola. We recommend that you take the time to read the entire manual before you begin the assembly. Check whether you have received all the necessary parts before you begin assembly. For your safety, follow all the applicable instructions. This also guarantees the safety of the installed roof. If you should have any questions, please feel free to contact your Deponti partner.



This manual should be kept in a safe, dry and shady place. In the event of damage or loss, the user must request a new copy of the manual from the dealer.

2. Safety precautions and warnings



Important:

Please read the safety precautions and warnings before assembling the pergola.

- During assembly, carefully follow the instructions and guidelines as described in this manual. Never change the order of the steps to be performed. If any aspect of the assembly procedure is unclear, please contact your Deponti partner. We reserve the right to make technical changes without written notice.
- We normally recommend that the pergola must be assembled by at least two people (qualified technicians/authorized installers) working together.



- Check the delivery immediately upon receipt. In the event of damage or an incomplete delivery please contact your partner immediately.
- The materials must be stored in a dry, ventilated area, not exposed to direct sunlight.
- Open the packaging carefully. Make sure that you do not damage the product.
- To prevent damage to your pergola, place the parts on a smooth, clean surface. Place the profiles on a flat surface, protected from sun and rain.



2. Safety precautions and warnings (continued)

- Adding or removing parts, the use or installation of materials. other than described in this manual, may adversely affect the safety of the pergola and is therefore strongly discouraged!
- Pay attention and be aware of moving parts.
- Cordon off the assembly location so that others are kept at a distance.
- Always wear the correct protective clothing (work gloves, dust mask, safety glasses, shoes with non-slip soles, etc.) during installation or servicing.
- Mount the system against a firm, flat wall and on a flat and stable foundation. Ensure that the wall and the ground are clean and dry.
- **Never** step or walk on the panel system.
- You must maintain and clean your pergola at least once a year. During this yearly maintenance make sure all fasteners are properly tightened.
- Dispose the product in accordance with local laws and regulations.
- It is forbidden to tamper with the bioclimatic pergola system.
- When safety regulations and instructions are not followed correctly, Deponti B.V. will not accept responsibility for damage(s) and injuries.





3. Product description

The Manual Pinela roof is a bioclimatic pergola system which is a rotatable panel system. The Manual Pinela panels can rotate 120° degree. Also it protects from sun, rain and limited snow loads.

The Pinela is available in the following dimensions;

- 3x3x2,5m
- 3x4x2,5m






4. Parts Overview

4.1 Partlist

PIECES CODE PRODUCT NAME QTY. A1 PILLAR PROFILE (IMPERFORETE) 3 Pcs A2 PILLAR PROFILE (PERFORETED) 1 Pcs B1 PILLAR PLATE MAGNETIC CRANK 4 Pcs E3 HOLDER PILLAR COVER BOLT 1 Pcs J1 M6x50 RUBBER CLOSURE BOLT 4 Pcs P1 M4x12 BOLT M6x20 LOUVER JOINT 24 Pcs P3 SHAFT RETAINING RING JOINT 8 Pcs P3 SHAFT RETAINING RING JOINT 8 Pcs P8 INSTALLATION MANUAL 32 Pcs P10 ASSEMBLY EQUIPMENT 42 Pcs P14 ASSEMBLY EQUIPMENT 42 Pcs P17 ASSEMBLY EQUIPMENT 42 Pcs P14 C 1 Pcs P17 ASSEMBLY EQUIPMENT 42 Pcs P17 ASSEMBLY EQUIPMENT 42 Pcs P11 ASSEMBLY EQUIPMENT 42 Pcs P14 C C 0 Tres P20 Interprofile (BACK) 1 Pcs P21 Interprofile (BACK) 1 Pcs						· · · ·
A2 PILLAR PROFILE (PERFORETED) 1 Pcs B1 PILLAR PLATE MAGNETIC CRANK 4 Pcs E3 HOLDER PILLAR COVER BOLT 1 Pcs J1 M6x50 RUBBER CLOSURE BOLT 4 Pcs P1 M4x12 BOLT M6x20 LOUVER JOINT 24 Pcs P3 SHAFT RETAINING RING JOINT 8 Pcs P5 WASHER SPARE PARTS PACKAGE 4 Pcs P8 INSTALLATION MANUAL 32 Pcs P14 42 Pcs 84 Pcs 1 Pcs P14 42 Pcs 920 1 Pcs P20 1 Pcs 1 Pcs 1 Pcs P21 1 Pcs 1 Pcs 1 Pcs P22 1 Pcs 1 Pcs 1 Pcs P21 1 Pcs 1 Pcs 1 Pcs P22 1 Pcs 1 Pcs 1 Pcs P22 1 Pcs 1 Pcs 1 Pcs C5 GUTTER PROFILE (BACK) 1 Pcs 1 Pcs C4 GUTTER PROFILE (RACTION 1 Pcs 1 Pcs C4 GUTTER SIDE COVER<			PIECES CODE		PRODUCT NAME	QTY.
BI PILLAR PLATE MAGNETIC CRANK 4 Pcs E3 HOLDER PILLAR COVER BOLT 1 Pcs J1 M6x50 RUBBER CLOSURE BOLT 4 Pcs PI M4x12 BOLT M6x20 LOUVER JOINT 24 Pcs P5 SHAFT RETAINING RING JOINT 8 Pcs P5 WASHER SPARE PARTS PACKAGE 4 Pcs P6 INSTALLATION MANUAL 32 Pcs P1 ASSEMBLY EQUIPMENT 42 Pcs P1 ASSEMBLY EQUIPMENT 42 Pcs P1 ASSEMBLY EQUIPMENT 42 Pcs P20 1 Pcs 1 Pcs P21 1 Pcs 1 Pcs P22 1 Pcs 1 Pcs P21 1 Pcs 1 Pcs P22 1 Pcs 1 Pcs P21 1 Pcs 1 Pcs P22 1 Pcs 1 Pcs P21 1 Pcs 1 Pcs P22 1 Pcs 1 Pcs C4 GUTTER PROFILE (BACK) 1 Pcs C3 GUTTER PROFILE (RIGHT) 1 Pcs C4 GUTTER PROFILE (RIGHT) 1 Pcs E1 UNIVERSAL DRIVE SHAFT 1 Pcs C2 JOINT PROFILE 2 Pcs C4 GUTTER BACK COVER 1 Pcs BOX-5/5 <td></td> <td colspan="2">Al</td> <td>PILLAR PROFILE (IMPERFORETE)</td> <td>3 Pcs</td>			Al		PILLAR PROFILE (IMPERFORETE)	3 Pcs
PUTON E3 HOLDER PILLAR COVER BOLT 1 Pcs 31 M6x50 RUBBER CLOSURE BOLT 4 Pcs P1 M4x12 BOLT M6x20 LOUVER JOINT 24 Pcs P3 SHAFT RETAINING RING JOINT 8 Pcs P5 WASHER SPARE PARTS PACKAGE 4 Pcs P8 INSTALLATION MANUAL 32 Pcs P14 42 Pcs 84 Pcs P17 ASSEMBLY EQUIPMENT 42 Pcs P14 42 Pcs 84 Pcs P20 P14 42 Pcs P21 P14 42 Pcs P22 1 Pcs 1 Pcs P21 P14 1 Pcs P22 1 Pcs 1 Pcs P21 P22 1 Pcs P22 1 Pcs 1 Pcs P23 GUTTER PROFILE (BACK) 1 Pcs P24 QUTTER PROFILE (RONT) 1 Pcs C3 GUTTER PROFILE (RONT) 1 Pcs C4 GUTTER PROFILE (RIGHT) 1 Pcs F2 GUTTER SIDE COVER 2 Pcs C3 GUTTER SIDE COVER 2 Pcs C4 GUTTER BACK COVER 1 Pcs F2 GUTTER BACK COVER 1 Pcs C3 LOUVER PROFILE (ARTICULATED) 1 Pcs			A2		PILLAR PROFILE (PERFORETED)] Pcs
Yes 31 M6x50 RUBBER CLOSURE BOLT 4 Pcs P1 M4x12 BOLT M6x20 LOUVER JOINT 24 Pcs P3 SHAFT RETAINING RING JOINT 8 Pcs P5 WASHER SPARE PARTS PACKAGE 4 Pcs P8 INSTALLATION MANUAL 32 Pcs P1 ASSEMBLY EQUIPMENT 42 Pcs P14 42 Pcs P17 84 Pcs P20 1 Pcs P21 1 Pcs P22 1 Pcs P22 1 Pcs C5 GUTTER PROFILE (BACK) 1 Pcs C6 GUTTER PROFILE (FRONT) 1 Pcs C3 GUTTER PROFILE (FRONT) 1 Pcs C4 GUTTER PROFILE (RIGHT) 1 Pcs E1 UNIVERSAL DRIVE SHAFT 1 Pcs E2 CRANK ARM 1 Pcs F2 GUTTER BACK COVER 2 Pcs G2 JOINT PROFILE 2 Pcs K1 GUTTER BACK COVER 1 Pcs BOX-3/5 D1 LOUVER PROFILE (ARTICULATED) 1 Pcs BOX-4/5 D3 LOUVER PROFILE 7 Pcs		BOX-1/5 PILLAR		Bl	PILLAR PLATE MAGNETIC CRANK	4 Pcs
PI M4x12 BOLT M6x20 LOUVER JOINT 24 pcs P3 SHAFT RETAINING RING JOINT 8 Pcs P5 WASHER SPARE PARTS PACKAGE 4 Pcs P8 INSTALLATION MANUAL 32 Pcs P1 ASSEMBLY EQUIPMENT 42 Pcs P14 42 Pcs P17 84 Pcs P20 1 Pcs P21 1 Pcs P22 1 Pcs P22 1 Pcs C5 GUTTER PROFILE (BACK) 1 Pcs C6 GUTTER PROFILE (FRONT) 1 Pcs C3 GUTTER PROFILE (RONT) 1 Pcs C4 GUTTER PROFILE (RIGHT) 1 Pcs E1 UNIVERSAL DRIVE SHAFT 1 Pcs E2 CRANK ARM 1 Pcs E2 GUTTER SIDE COVER 2 Pcs G2 JOINT PROFILE 2 Pcs K1 GUTTER BACK COVER 1 Pcs BOX-3/5 D1 LOUVER PROFILE (ARTICULATED) 1 Pcs BOX-4/5 D3 LOUVER PROFILE 7 Pcs				E3	HOLDER PILLAR COVER BOLT] Pcs
No ASSEMBLY EQUIPMENT 42 Pcs P11 ASSEMBLY EQUIPMENT 42 Pcs P14 42 Pcs P17 84 Pcs P20 1 Pcs P21 1 Pcs P22 1 Pcs P22 1 Pcs C6 CUTTER PROFILE (BACK) 1 Pcs C6 CUTTER PROFILE (FRONT) 1 Pcs C6 CUTTER PROFILE (RIGHT) 1 Pcs C4 CUTTER PROFILE (RIGHT) 1 Pcs E1 UNIVERSAL DRIVE SHAFT 1 Pcs E2 CRANK ARM 1 Pcs F2 GUTTER SIDE COVER 2 Pcs G2 JOINT PROFILE 1 Pcs F2 GUTTER BACK COVER 1 Pcs K1 GUTER PROFILE (ARTICULATED) 1 Pcs BOX-3/5 D1 LOUVER PROFILE 6 Pcs BOX-4/5 D3 LOUVER PROFILE 7 Pcs BOX-5/5 D3 LOUVER PROFILE 7 Pcs			ACCESSORY BOX	וכ	M6x50 RUBBER CLOSURE BOLT	4 Pcs
No ASSEMBLY EQUIPMENT 42 Pcs P11 ASSEMBLY EQUIPMENT 42 Pcs P14 42 Pcs P17 84 Pcs P20 1 Pcs P21 1 Pcs P22 1 Pcs P22 1 Pcs C6 CUTTER PROFILE (BACK) 1 Pcs C6 CUTTER PROFILE (FRONT) 1 Pcs C6 CUTTER PROFILE (RIGHT) 1 Pcs C4 CUTTER PROFILE (RIGHT) 1 Pcs E1 UNIVERSAL DRIVE SHAFT 1 Pcs E2 CRANK ARM 1 Pcs F2 GUTTER SIDE COVER 2 Pcs G2 JOINT PROFILE 1 Pcs F2 GUTTER BACK COVER 1 Pcs K1 GUTER PROFILE (ARTICULATED) 1 Pcs BOX-3/5 D1 LOUVER PROFILE 6 Pcs BOX-4/5 D3 LOUVER PROFILE 7 Pcs BOX-5/5 D3 LOUVER PROFILE 7 Pcs				Pl	M4x12 BOLT M6x20 LOUVER JOINT	24 Pcs
No ASSEMBLY EQUIPMENT 42 Pcs P11 ASSEMBLY EQUIPMENT 42 Pcs P14 42 Pcs P17 84 Pcs P20 1 Pcs P21 1 Pcs P22 1 Pcs P22 1 Pcs C6 CUTTER PROFILE (BACK) 1 Pcs C6 CUTTER PROFILE (FRONT) 1 Pcs C6 CUTTER PROFILE (RIGHT) 1 Pcs C4 CUTTER PROFILE (RIGHT) 1 Pcs E1 UNIVERSAL DRIVE SHAFT 1 Pcs E2 CRANK ARM 1 Pcs F2 GUTTER SIDE COVER 2 Pcs G2 JOINT PROFILE 1 Pcs F2 GUTTER BACK COVER 1 Pcs K1 GUTER PROFILE (ARTICULATED) 1 Pcs BOX-3/5 D1 LOUVER PROFILE 6 Pcs BOX-4/5 D3 LOUVER PROFILE 7 Pcs BOX-5/5 D3 LOUVER PROFILE 7 Pcs				P3	SHAFT RETAINING RING JOINT	8 Pcs
No ASSEMBLY EQUIPMENT 42 Pcs P11 ASSEMBLY EQUIPMENT 42 Pcs P14 42 Pcs P17 84 Pcs P20 1 Pcs P21 1 Pcs P22 1 Pcs P22 1 Pcs C6 CUTTER PROFILE (BACK) 1 Pcs C6 CUTTER PROFILE (FRONT) 1 Pcs C6 CUTTER PROFILE (RIGHT) 1 Pcs C4 CUTTER PROFILE (RIGHT) 1 Pcs E1 UNIVERSAL DRIVE SHAFT 1 Pcs E2 CRANK ARM 1 Pcs F2 GUTTER SIDE COVER 2 Pcs G2 JOINT PROFILE 1 Pcs F2 GUTTER BACK COVER 1 Pcs K1 GUTER PROFILE (ARTICULATED) 1 Pcs BOX-3/5 D1 LOUVER PROFILE 6 Pcs BOX-4/5 D3 LOUVER PROFILE 7 Pcs BOX-5/5 D3 LOUVER PROFILE 7 Pcs				P5	WASHER SPARE PARTS PACKAGE	4 Pcs
PIT 84 Pcs P20 1 Pcs P21 1 Pcs P22 1 Pcs P22 1 Pcs CS CUTTER PROFILE (BACK) 1 Pcs C6 CUTTER PROFILE (FRONT) 1 Pcs C3 GUTTER PROFILE (FRONT) 1 Pcs C4 CUTTER PROFILE (RIGHT) 1 Pcs E1 UNIVERSAL DRIVE SHAFT 1 Pcs E2 CRANK ARM 1 Pcs F2 GUTTER SIDE COVER 2 Pcs G2 JOINT PROFILE 2 Pcs K1 GUTTER BACK COVER 1 Pcs BOX-3/5 D1 LOUVER PROFILE (ARTICULATED) 1 Pcs BOX-4/5 D3 LOUVER PROFILE 6 Pcs BOX-5/5 D3 LOUVER PROFILE 7 Pcs				P8	INSTALLATION MANUAL	32 Pcs
PIT 84 Pcs P20 1 Pcs P21 1 Pcs P22 1 Pcs P22 1 Pcs CS CUTTER PROFILE (BACK) 1 Pcs C6 CUTTER PROFILE (FRONT) 1 Pcs C3 GUTTER PROFILE (FRONT) 1 Pcs C4 CUTTER PROFILE (RIGHT) 1 Pcs E1 UNIVERSAL DRIVE SHAFT 1 Pcs E2 CRANK ARM 1 Pcs F2 GUTTER SIDE COVER 2 Pcs G2 JOINT PROFILE 2 Pcs K1 GUTTER BACK COVER 1 Pcs BOX-3/5 D1 LOUVER PROFILE (ARTICULATED) 1 Pcs BOX-4/5 D3 LOUVER PROFILE 6 Pcs BOX-5/5 D3 LOUVER PROFILE 7 Pcs				Pll	ASSEMBLY EQUIPMENT	42 Pcs
PIT 84 Pcs P20 1 Pcs P21 1 Pcs P22 1 Pcs P22 1 Pcs CS CUTTER PROFILE (BACK) 1 Pcs C6 CUTTER PROFILE (FRONT) 1 Pcs C3 GUTTER PROFILE (FRONT) 1 Pcs C4 CUTTER PROFILE (RIGHT) 1 Pcs E1 UNIVERSAL DRIVE SHAFT 1 Pcs E2 CRANK ARM 1 Pcs F2 GUTTER SIDE COVER 2 Pcs G2 JOINT PROFILE 2 Pcs K1 GUTTER BACK COVER 1 Pcs BOX-3/5 D1 LOUVER PROFILE (ARTICULATED) 1 Pcs BOX-4/5 D3 LOUVER PROFILE 6 Pcs BOX-5/5 D3 LOUVER PROFILE 7 Pcs				P14		42 Pcs
P21 1 Pcs P22 1 Pcs P22 1 Pcs CS GUTTER PROFILE (BACK) 1 Pcs C6 GUTTER PROFILE (FRONT) 1 Pcs C3 GUTTER PROFILE (LEFT) 1 Pcs C4 GUTTER PROFILE (RIGHT) 1 Pcs E1 UNIVERSAL DRIVE SHAFT 1 Pcs E2 CRANK ARM 1 Pcs F2 GUTTER SIDE COVER 2 Pcs G2 JOINT PROFILE 1 Pcs K1 GUTTER BACK COVER 1 Pcs BOX-3/5 D1 LOUVER PROFILE (ARTICULATED) 1 Pcs BOX-4/5 D3 LOUVER PROFILE 7 Pcs BOX-5/5 D3 LOUVER PROFILE 7 Pcs				P17		84 Pcs
P22 1 Pcs P22 1 Pcs P22 1 Pcs 1 Pcs 1 Pcs C6 GUTTER PROFILE (BACK) 1 Pcs C3 GUTTER PROFILE (FRONT) 1 Pcs C4 GUTTER PROFILE (RIGHT) 1 Pcs E1 UNIVERSAL DRIVE SHAFT 1 Pcs E2 CRANK ARM 1 Pcs F2 GUTTER BACK COVER 2 Pcs G2 JOINT PROFILE 1 Pcs K1 GUTTER BACK COVER 1 Pcs BOX-3/5 D1 LOUVER PROFILE (ARTICULATED) 1 Pcs BOX-4/5 D3 LOUVER PROFILE 7 Pcs BOX-5/5 D3 LOUVER PROFILE 7 Pcs				P20		1 Pcs
Normal ProductCSGUTTER PROFILE (BACK)1 PcsC6GUTTER PROFILE (FRONT)1 PcsC3GUTTER PROFILE (LEFT)1 PcsC4GUTTER PROFILE (RIGHT)1 PcsE1UNIVERSAL DRIVE SHAFT1 PcsE2CRANK ARM1 PcsF2GUTTER SIDE COVER2 PcsG2JOINT PROFILE2 PcsK1GUTTER BACK COVER1 PcsBOX-3/5D1LOUVER PROFILE (ARTICULATED)1 PcsBOX-4/5D3LOUVER PROFILE7 PcsBOX-5/5D3LOUVER PROFILE7 Pcs				P21		1 Pcs
PUDD SY CGCGGUTTER PROFILE (FRONT)1 PcsC3GUTTER PROFILE (LEFT)1 PcsC4GUTTER PROFILE (RIGHT)1 PcsE1UNIVERSAL DRIVE SHAFT1 PcsE2CRANK ARM1 PcsF2GUTTER SIDE COVER2 PcsG2JOINT PROFILE2 PcsK1GUTTER BACK COVER1 PcsBOX-3/5D1LOUVER PROFILE (ARTICULATED)1 PcsBOX-4/5D3LOUVER PROFILE7 PcsBOX-5/5D3LOUVER PROFILE7 Pcs				P22] Pcs
PUDD SY CGCGGUTTER PROFILE (FRONT)1 PcsC3GUTTER PROFILE (LEFT)1 PcsC4GUTTER PROFILE (RIGHT)1 PcsE1UNIVERSAL DRIVE SHAFT1 PcsE2CRANK ARM1 PcsF2GUTTER SIDE COVER2 PcsG2JOINT PROFILE2 PcsK1GUTTER BACK COVER1 PcsBOX-3/5D1LOUVER PROFILE (ARTICULATED)1 PcsBOX-4/5D3LOUVER PROFILE7 PcsBOX-5/5D3LOUVER PROFILE7 Pcs		ТЕК				
PUDD STATEC3GUTTER PROFILE (LEFT)1 PcsC4GUTTER PROFILE (RIGHT)1 PcsE1UNIVERSAL DRIVE SHAFT1 PcsE2CRANK ARM1 PcsF2GUTTER SIDE COVER2 PcsG2JOINT PROFILE2 PcsK1GUTTER BACK COVER1 PcsBOX-3/5D1LOUVER PROFILE (ARTICULATED)1 PcsBOX-4/5D3LOUVER PROFILE7 PcsBOX-5/5D3LOUVER PROFILE7 Pcs				C5	GUTTER PROFILE (BACK)	1 Pcs
F2GUTTER SIDE COVER2 PcsG2JOINT PROFILE2 PcsK1GUTTER BACK COVER1 PcsBOX-3/5D1LOUVER PROFILE (ARTICULATED)1 PcsD3LOUVER PROFILE6 PcsBOX-4/5D3LOUVER PROFILE7 PcsBOX-5/5D3LOUVER PROFILE7 Pcs				C6	GUTTER PROFILE (FRONT)	1 Pcs
F2GUTTER SIDE COVER2 PcsG2JOINT PROFILE2 PcsK1GUTTER BACK COVER1 PcsBOX-3/5D1LOUVER PROFILE (ARTICULATED)1 PcsD3LOUVER PROFILE6 PcsBOX-4/5D3LOUVER PROFILE7 PcsBOX-5/5D3LOUVER PROFILE7 Pcs				C3	GUTTER PROFILE (LEFT)	1 p _{cs}
F2GUTTER SIDE COVER2 PcsG2JOINT PROFILE2 PcsK1GUTTER BACK COVER1 PcsBOX-3/5D1LOUVER PROFILE (ARTICULATED)1 PcsD3LOUVER PROFILE6 PcsBOX-4/5D3LOUVER PROFILE7 PcsBOX-5/5D3LOUVER PROFILE7 Pcs		GUT		C4	GUTTER PROFILE (RIGHT)	1 _{Pcs}
F2GUTTER SIDE COVER2 PcsG2JOINT PROFILE2 PcsK1GUTTER BACK COVER1 PcsBOX-3/5D1LOUVER PROFILE (ARTICULATED)1 PcsD3LOUVER PROFILE6 PcsBOX-4/5D3LOUVER PROFILE7 PcsBOX-5/5D3LOUVER PROFILE7 Pcs		2/5		El	UNIVERSAL DRIVE SHAFT	۱ _{Pcs}
F2GUTTER SIDE COVER2 PcsG2JOINT PROFILE2 PcsK1GUTTER BACK COVER1 PcsBOX-3/5D1LOUVER PROFILE (ARTICULATED)1 PcsD3LOUVER PROFILE6 PcsBOX-4/5D3LOUVER PROFILE7 PcsBOX-5/5D3LOUVER PROFILE7 Pcs		-XO		E2	CRANK ARM	۱ _{Pcs}
KIGUTTER BACK COVER1 PcsBOX-3/5 LOUVERD1LOUVER PROFILE (ARTICULATED)1 PcsBOX-4/5 LOUVERD3LOUVER PROFILE6 PcsBOX-4/5 LOUVERD3LOUVER PROFILE7 PcsBOX-5/5D3LOUVER PROFILE7 Pcs		Ш		F2	GUTTER SIDE COVER	2 Pcs
BOX-3/5 LOUVER D1 LOUVER PROFILE (ARTICULATED) 1 Pcs BOX-3/5 LOUVER D3 LOUVER PROFILE 6 Pcs BOX-4/5 LOUVER D3 LOUVER PROFILE 7 Pcs BOX-5/5 D3 LOUVER PROFILE 7 Pcs				G2	JOINT PROFILE	2 Pcs
BOX-3/5 D3 LOUVER PROFILE 6 Pcs BOX-4/5 D3 LOUVER PROFILE 7 Pcs BOX-5/5 D3 LOUVER PROFILE 7 Pcs				K1	GUTTER BACK COVER] Pcs
BOX-3/5 D3 LOUVER PROFILE 6 Pcs BOX-4/5 D3 LOUVER PROFILE 7 Pcs BOX-5/5 D3 LOUVER PROFILE 7 Pcs						
BOX-4/5 D3 LOUVER PROFILE 7 Pcs BOX-5/5 D3 LOUVER PROFILE 7 Pcs					LOUVER PROFILE (ARTICULATED)	1 Pcs
BOX-4/3 LOUVER BOX-5/5 D3 LOUVER PROFILE 7 Pcs				D3	LOUVER PROFILE	6 Pcs
LOUVER D3 LOUVER PROFILE 7 Pcs		BOX-4/5		D3	LOUVER PROFILE	7 Pcs
BOX-5/5						
BOX-5/5						L
				D3	LOUVER PROFILE	7 Pcs
		LOUVE				






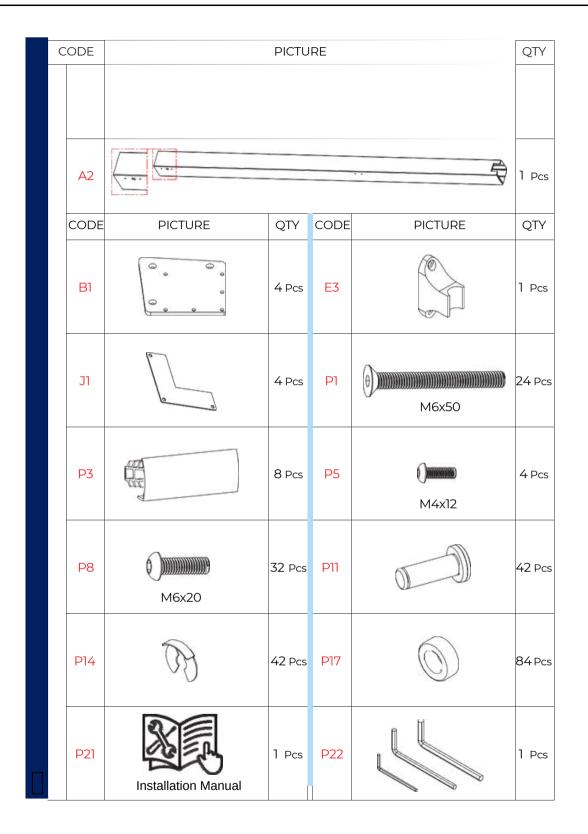





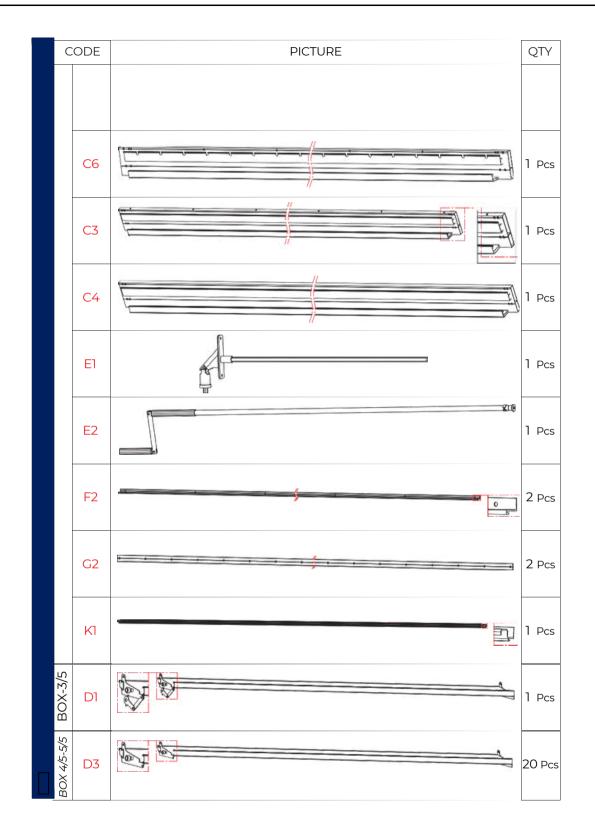





4.2 Delivery Inspection

Always carefully check the delivered items against the accompanying delivery note to ensure that the quantity and quality are correct. Any visible defects must be reported in writing within 7 days of delivery.





5. Preperation for assembly

5.1 Conditions for assembly

Ground & façade

- A good flat stable surface is required for construction of the pergola. The location where the
- system is placed must be construction-ready and free of obstacles (garden furniture. flower
- boxes. etc.) so installers can perform their work without hindrance. Any obstacles. including
- utility lines (such as power cables. etc.). roots and debris. must have
- been removed from the ground.
 The façade must be free of sun shades. etc.
 The area where the wall profile will be placed must be firm. even and flat.

Installation between walls

• Due to expansion of the materials. the pergola may not be placed too tightly between two walls; there must be a gap of 1.5 mm per metre of width of the pergola.

Rubber seals

 
- A Deponti pergola is standard equipped with pre-assembled rubber seals.
- If the rubber seals are deformed, they can be straightened with a little heat. from a hot air heater or hair dryer for example.

 
Warranty is void if the Manual Pinela pergola is not assembled and installed in accordance with the instructions.

 


 


5.2 Inspection of tools and accessories

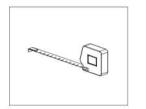

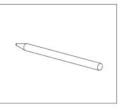

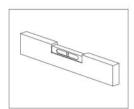 


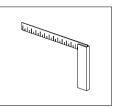

 






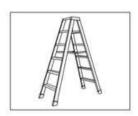



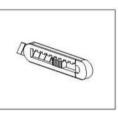





6. Assembly



1. All mounting bolts should be placed on the column by hand and then tightened with an allen key. Repeat this step for all 4 columns.

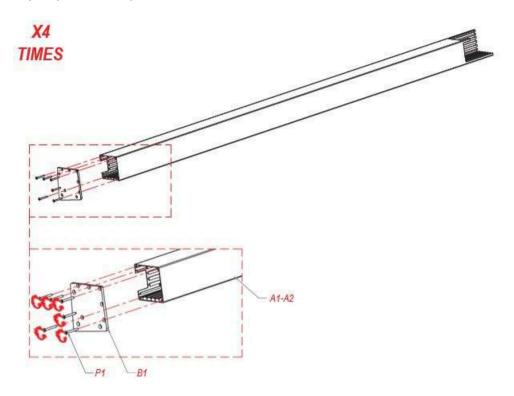


2. Take part C1, C2, C3 and C4 and add the rubbers to it. It should be ensured that the rubber stopper is fully seated on the surface.

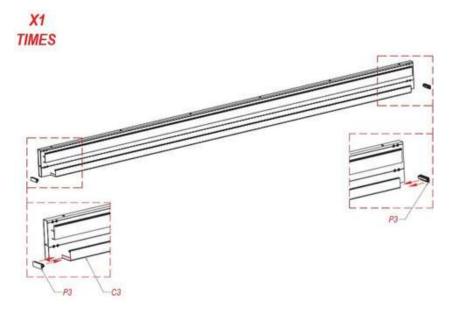






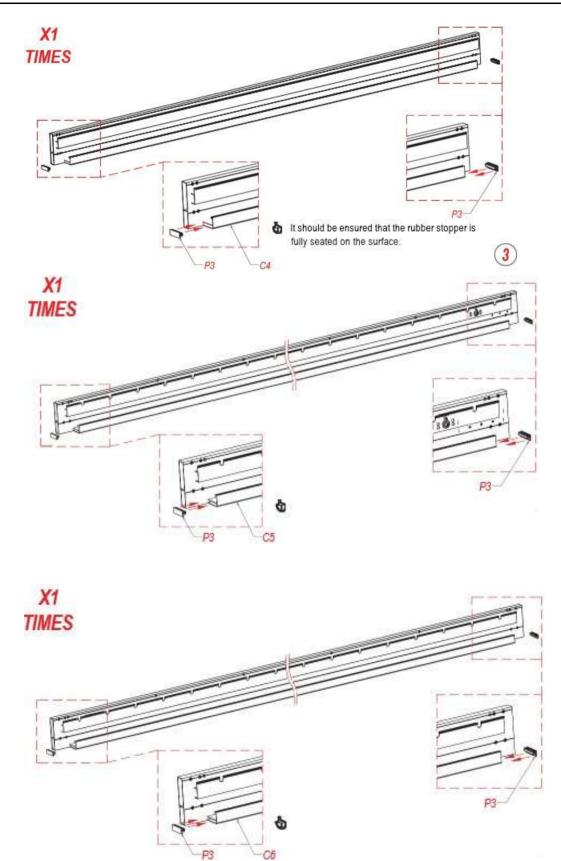




3. Assemble part A1 and A2 to part C1. It should be ensured that the mounting rods are fully inserted into the channels.(Step 3)

Please note: Assembly should be performed on a soft floor or assembly pedestals to avoid any damage to the product.

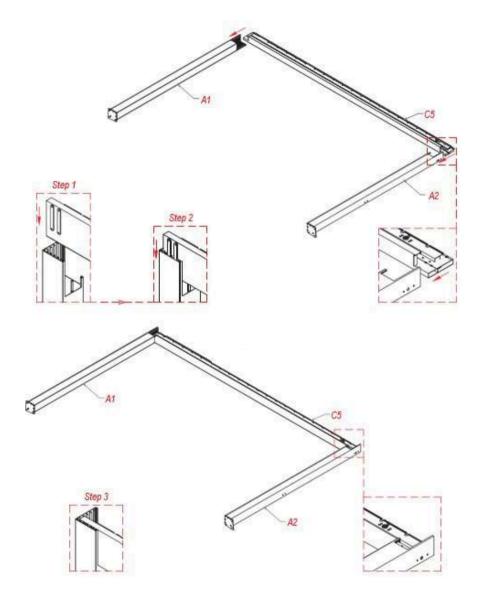

4. Make sure the bolts are fully tightened.

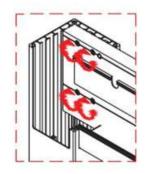







5. Assemble 2x parts A1 to part C2. It should be ensured that the mounting rods are fully inserted into the channels.(Step 3)

Please note: Assembly should be performed on a soft floor or assembly pedestals to avoid any damage to the product.

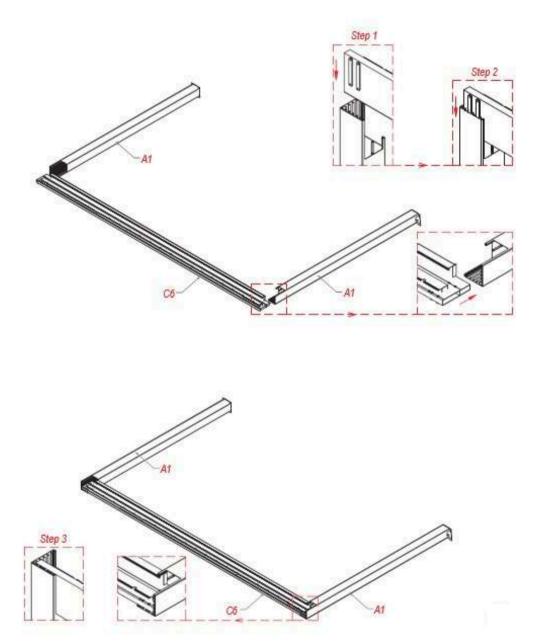

 
6. Make sure the bolts are fully tightened.

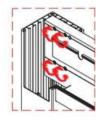






7. Put the pillars and gutter profile to an upright position and connect them with the left and right gutter profile (part C3 and C4). It should be ensured that the mounting rods are fully inserted into the channels.

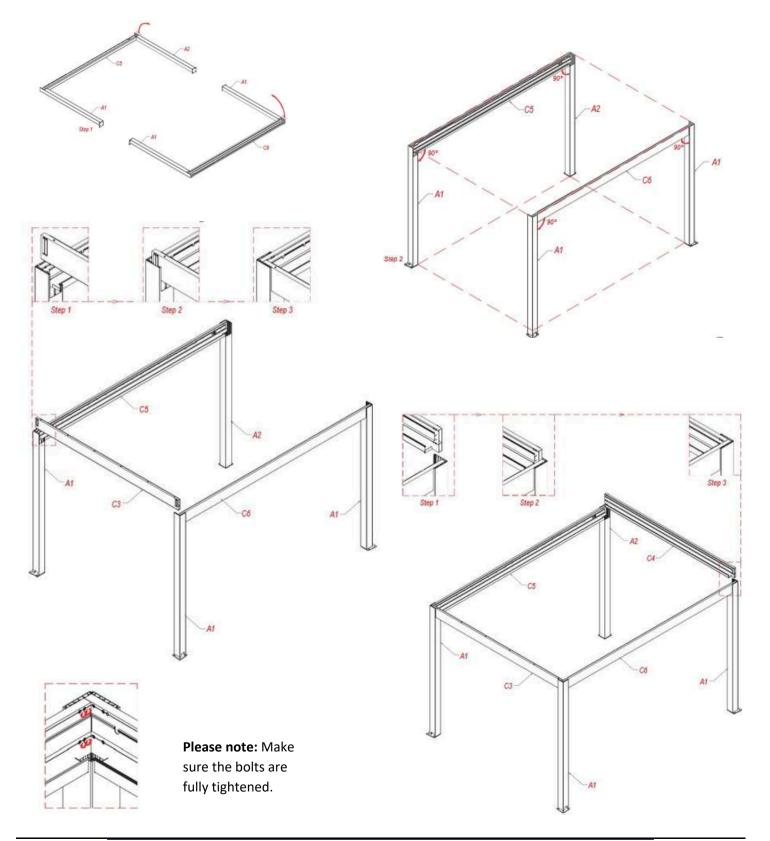






8. Before fixing the product to the floor , it should be ensured that diagonal dimensions are same.

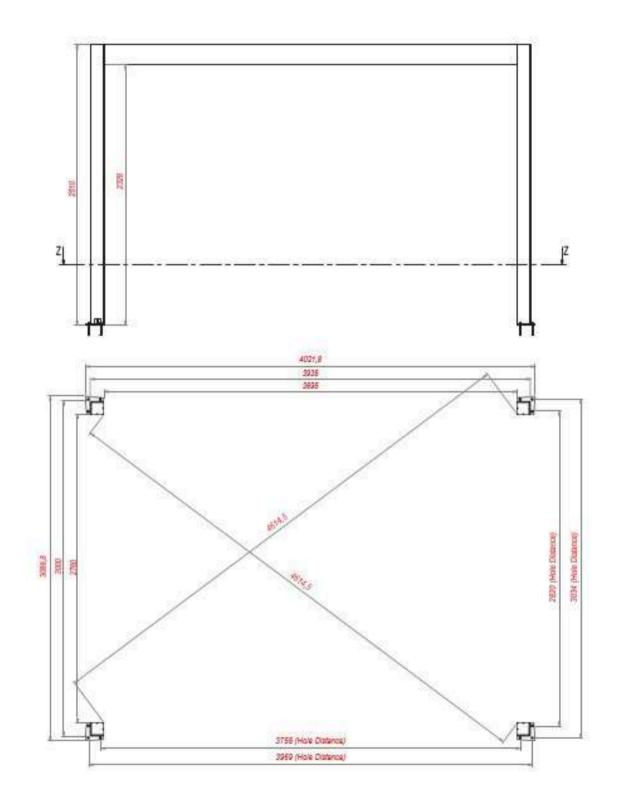






9. Before the Louver panels are placed, the product must be fixed to the floor with suitable mounting equipment. The balance of the product should be checked during assembly. The pillars of the product have to have 90° to the ground. It should be checked with water gage during installation.

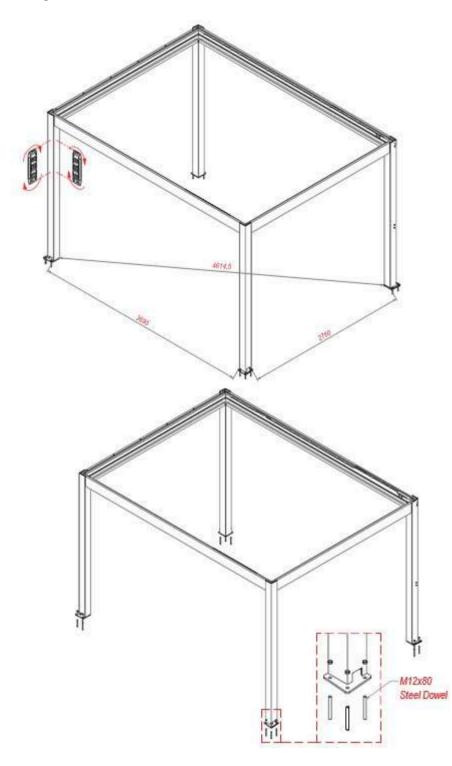






10. Louver installation has to be started with the second louver panel which has joint shaft on it. The existing bolt has to be removed, the mechanism has to be assembled and the bolt has to be tightened again. (See step 3 in image below)

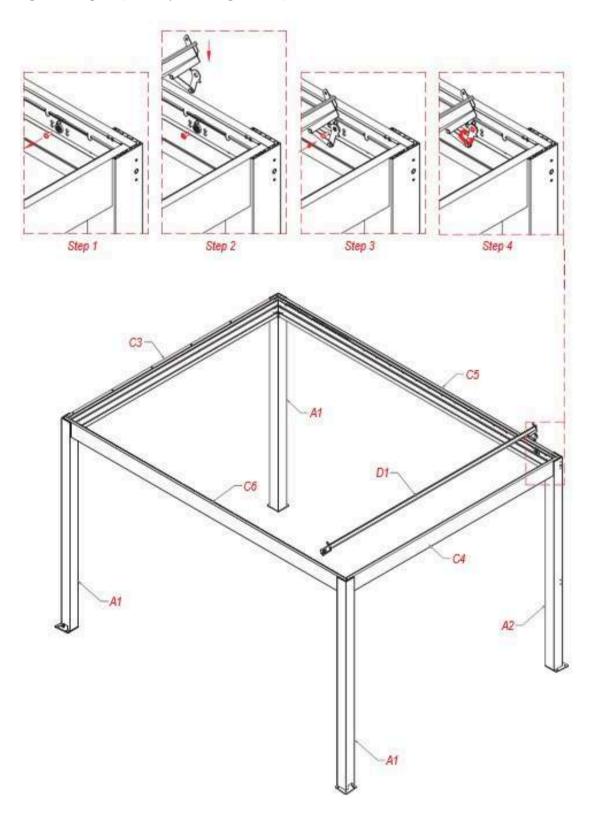






11. The universal drive shaft has to be assembled.

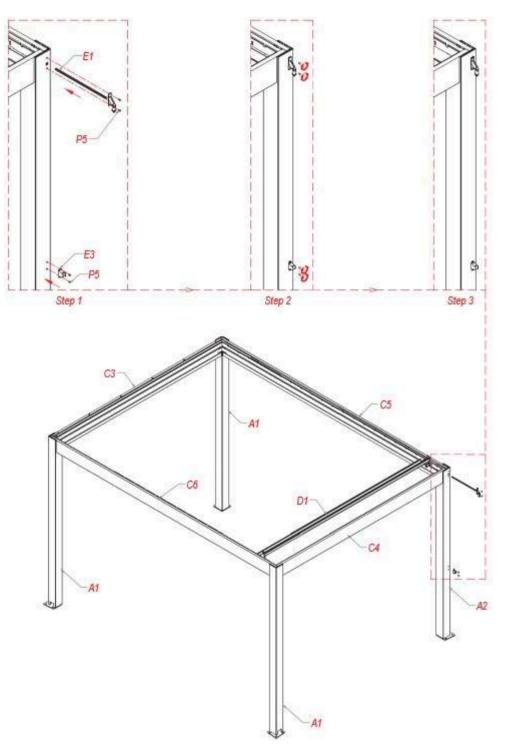






11. The louver has to be placed.

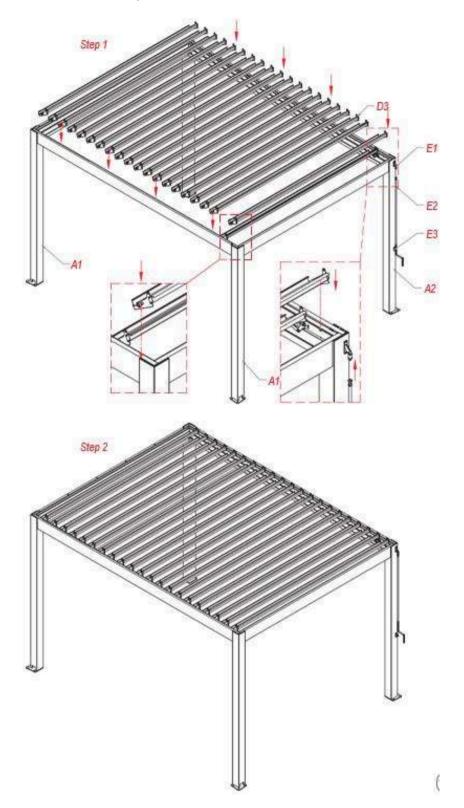





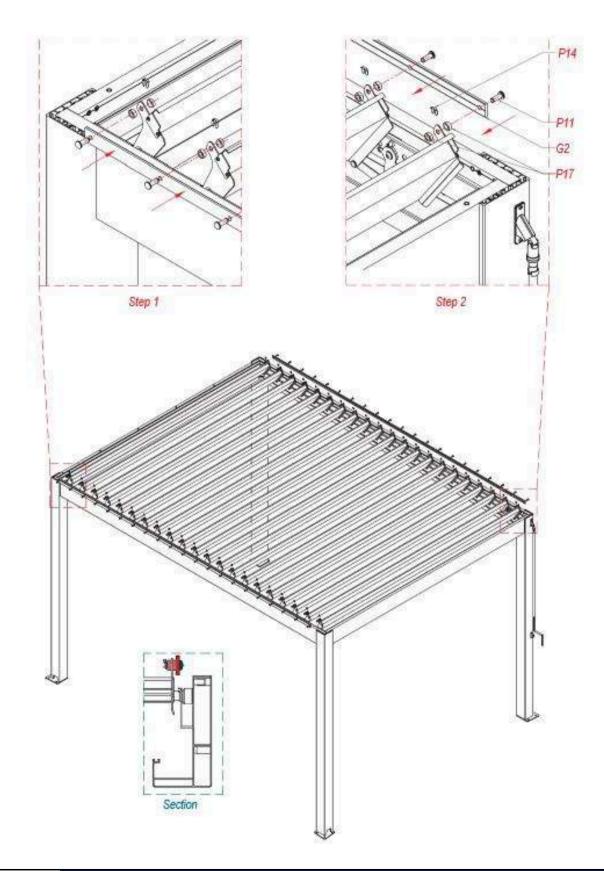


12. The Louver have to be fixed to joint profile as shown on the step 1 and step 2 in the image below.






13. It should be ensured that the circlip coded p13 clicked into the channel as shown on step1 and step2 in the image below.

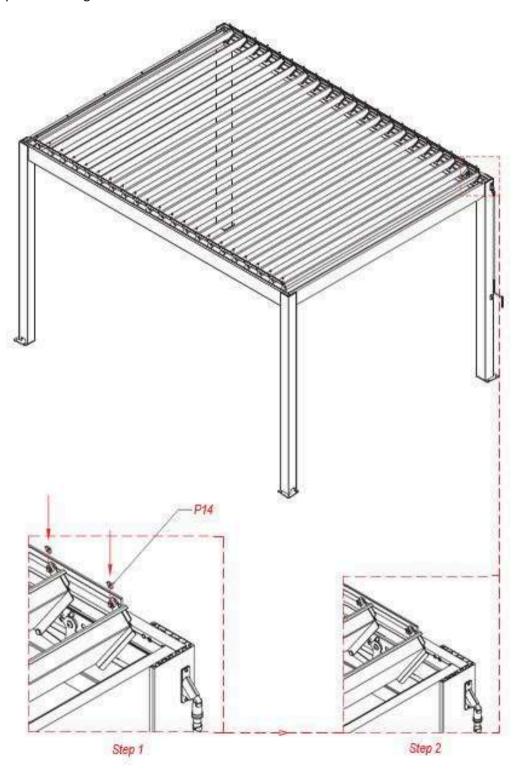






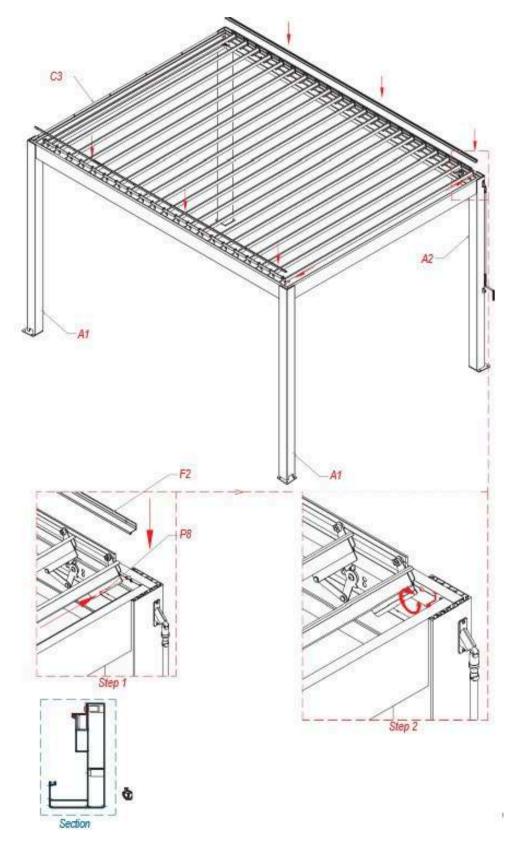

14. It should be ensured that the side closure profile passes into the channel on the gutter.





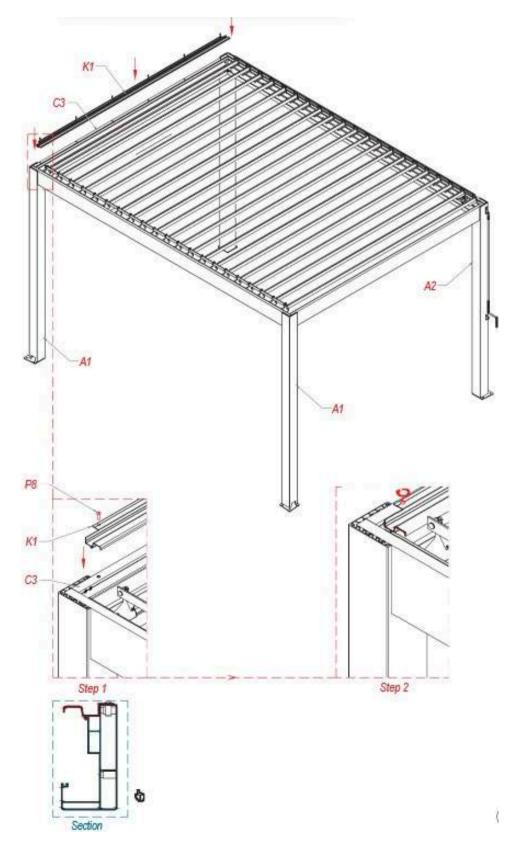


15. It should be ensured that the side closure profile passes into the channel on the gutter.





16. Pillar cover has to be fixed.

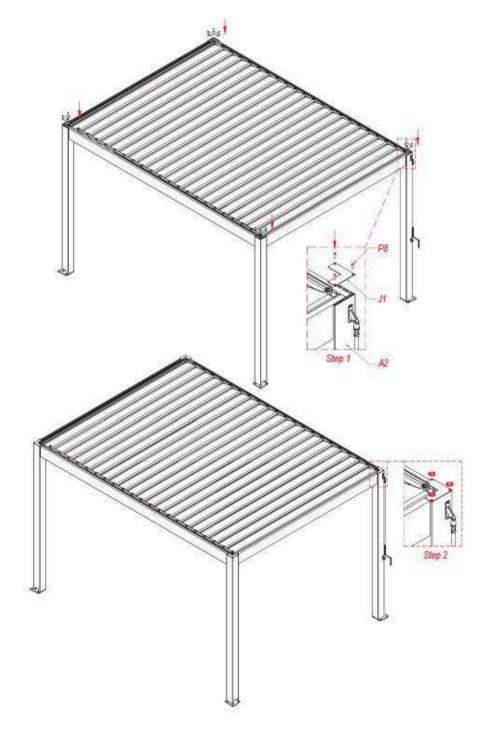

17. Congratulations! The pergola is now finished!



7. Maintenance



We recommend that you maintain and clean your pergola at least once a year.

Check whether the screw connections are tight. If not. tighten them firmly.

The aluminium profiles that are dirty can be cleaned with lukewarm water and a cleaning product.

- Use a soft brush or sponge.
- Never use abrasives. aggressive solvents or a pressure washer.
- Wet first and rinse off with lots of water. and then wipe with a soft cloth.

8. Disposal of waste

Dispose of the product according to local laws and regulations.

9. Warranty conditions

Warranty in accordance with the warranty conditions and Deponti's general terms and conditions. These can be found on the website www.deponti.com.

10. Contact

IMPORTANT: Your Deponti partner is your first point of contact for questions and comments.